

 


OIL/FLUID EXTRACTOR

This extractor is designed to vacuum fluids from inaccessible or confined areas. It is ideal for oil changes on boats, cars, motorcycles, outdoor power equipment, industrial machinery etc. Also handy to remove bilge water from boats, trapped water in plumbing systems etc.

Contents:

- A** 6 Litre Container (calibrated at 1 litre intervals)
- B** Cap (inlet)
- C** Black Rubber Cap / Pressure release valve
- D** Pump (removable)
- E** Pour spout
- F** Tube assembly

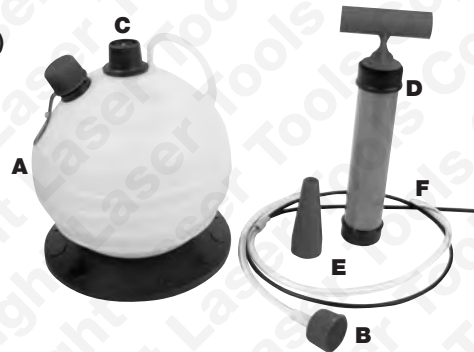

Instructions for removing engine oil

1. Remove dipstick
2. Insert extractor tube into dipstick pipe until it reaches the bottom of the oil pan
3. Pump oil out as required.
4. Replace red cap on container with tube cap and fix firmly
5. Before attaching pump make sure the black rubber collar on container is firmly seated
6. With two hands pump 10-20 times. Oil will flow automatically
DO NOT PUMP CONTINUOUSLY – DO NOT FORCE THE PUMP HANDLE
7. After all the oil has been extracted or when the container is full, press the release valve on the cap for 5 secs to release all vacuum.
8. Remove tube cap from container with a twisting action.
Remove pump and attach pour spout and empty into a container for safe disposal.

WARNING

Do not use with gasoline or other flammable liquids
Do not use the unit to extract dangerous chemicals, poisons, acids alkalines or solvents
The unit is not designed for long term storage
Do not store the unit under extreme conditions
Do not adapt the unit for any other purpose than what it was originally intended for.



Butts of Bawtry

Station Yard Bawtry Doncaster South Yorks DN10 6QD UK

Tel: 0044 (0)1302 710868 Fax: 0044 (0)1302 719481

Web: www.buttsofbawtry.com Email: info@buttsofbawtry.com